
# MiniTurbo Thermal Cycler TCMI-0810

# **Operation Manual**

Ver 1.0

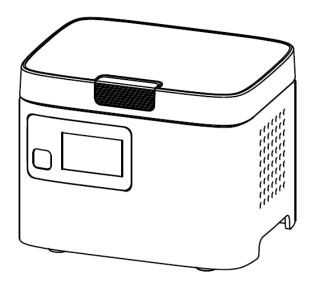



Copyright © 2018 Blue-Ray Biotech Corp.
All Rights Reserved

# **Table of Contents**

1.	Safety Precautions	1
2.	General Description	2
	2.1 Features	2
	2.2 Product Overview	3
3.	Unpacking	6
	3.1 Unpacking List	6
4.	Operation	7
	4.1 Initial Operation	7
	4.2 Lid Opening/Closing	7
	4.3 Programmable Chip	8
	4.4 Heated Lid	9
	4.5 Loading the Reaction Vessel	9
	4.6 Main screen	9
	4.7 Start Running	10
5.	Preventative Maintenance	11
	5.1 Cleaning the Unit	11
	5.2 Cleaning the Heated Lid	11
6.	Troubleshooting	12
	6.1 General Error	12
	6.2 Error Messages	12
Аp	opendix A: Technical Specifications	14
Δn	onendix B: CF Declaration	15

### 1. Safety Precautions

Before using the **MiniTurbo**, please read this operation manual carefully and pay attention to the safety information. To guarantee problem free operation, please follow the instructions and safety precautions to ensure safe operation of the **MiniTurbo**. It is essential to observe the following:

- 1. Do not use the device in a potentially explosive environment or with potentially explosive chemicals.
- 2. Avoid the device in direct sunlight.
- 3. Choose a flat, stable surface capable of supporting the weight of the device.
- 4. Make sure the power source conforms to the required power supply specifications.
- 5. To avoid electric shock, make sure the device is plugged into a grounded electrical outlet.
- 6. Do not allow water or any foreign objects to enter the various openings of the device.
- 7. Switch off the device and unplug the mains cable before cleaning or performing service on the device, for instance when replacing the fuses.
- 8. Repairs should be carried out by authorized service personnel only.
- 9. Safety label



High Temperature Label: Please be aware of the heated components.

## 2. General Description

The **MiniTurbo** is a simple, portable and affordable thermal cycler. It is easy to be moved around and allows a Polymerase Chain Reaction (PCR) to be run immediately. This portable instrument provides the same precise test results as a normal benchtop thermal cycler. It is a well-designed, reliable and convenient thermal cycler that can be used anywhere.

#### 2.1 Features

- The small size makes the instrument very easy to move about.
- Light, handy and modern design.
- 8 x 0.2ml PCR tube capacity.
- Easy-to-operate. One button to operate.
- The heated lid prevents the formation of condensation.
- Precise temperature control.
- Fast Ramping Rate.
- Open system. Fully programmable

#### 2.2 Product Overview

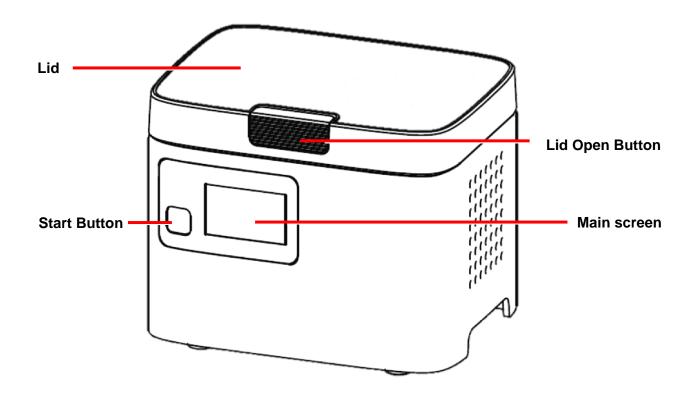


Figure 1. Front view

Table 1. Detailed description for front view

Name	Function
Main careen	The main screen displays the heater temperature and the count-down
Main screen	time during the protocol running.
Start Button	Start the protocol running or switch count-down time and heater
Start Button	temperature during the protocol running.
Lid	The heated lid is designed to prevent condensation inside the
Lia	reaction vessels during PCR temperature cycling.
Lid Open	Dross the button to open the lid
Button	Press the button to open the lid.

#### Note

Please do not touch, or put pressure, on the main screen when moving or lifting the instrument, this might damage it.

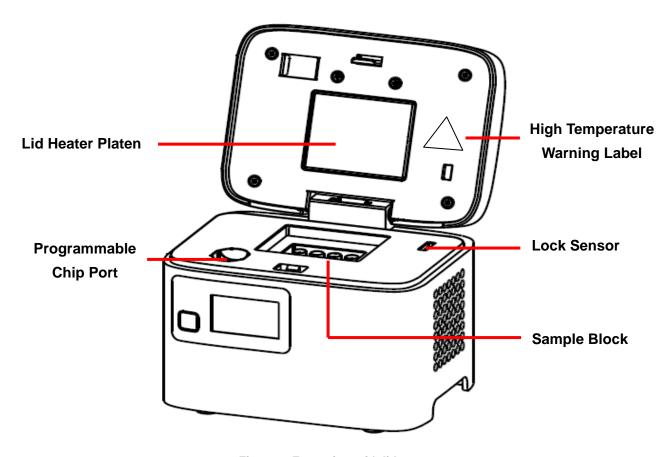


Figure 2. Front view with lid open

Table 2. Detailed description for front view with lid open

Name	Function	
High Tomporature	During and after PCR operation, the lid heater platen and the sample	
High Temperature	block may become very hot (up to 105°C). Please be aware of the	
Warning Label	high temperature.	
	The heater platen is designed to prevent condensation inside the	
	reaction vessels and to apply consistent pressure to the top of the	
Lid Heater Platen	reaction vessels. This ensures good contact between the reaction	
Liu neater Flaten	vessels and the sample block for better heat conduction. It will also	
	help prevent the leakage of sample vapor caused by weak vessel	
	caps or poor sealing.	
Sample Block	The sample block holds the reaction vessels.	
Programmable	The Programmable Chip Port recognizes the different protocols	
Chip port	automatically when the Programmable chip is inserted.	
Lask Canasa	The lock sensor will detect the condition of the lid. The function of the	
Lock Sensor	lock sensor can be changed in the protocol.	

With lock sensor function: The running protocol will be paused during
the run.
Without lock sensor function: The running protocol will not be paused
even when lid is opened.

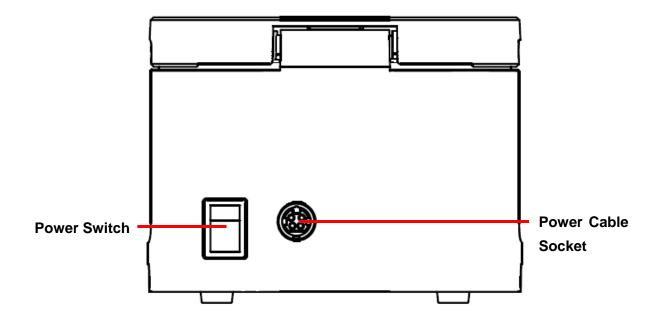


Figure 3. Rear view

Table 3. Detailed description for rear view

Name	Function	
Power Cable Socket	Power cable socket compartment.	
Power Switch	Power On/Off switch.	

## 3. Unpacking

#### 3.1 Unpacking List

Open the MiniTurbo package and confirm that all the listed items are included:

- MiniTurbo unit x 1
- Programmable Chip x 1
- MiniTurbo Writer x 1
- MiniTurbo Writer USB connecter x 1
- Software Operation manual x 1
- AC power adapter x 1
- AC power cord x 1

If there are any items missing, damaged, or there are incorrect items in the package, please contact your distributor or sales representative immediately.

## 4. Operation

#### 4.1 Initial Operation

Place the device on a steady, flat table. Check that the power source is compatible. Connect the DC-in plug to the DC-in jack at the rear of the device.

Switch the device on using the power switch at the rear of the unit. The main screen will light up for 2 seconds and there will be a "beep". This indicates that power is on. Switch off the device when stop using.

#### 4.2 Lid Opening/Closing

To open the lid, push the lid open button inwards and lift the lid to the upright position, as shown in Figure 4.

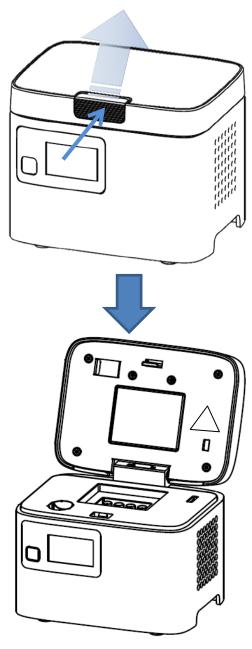


Figure 4. Opening the lid

To close the lid, push the lid downwards until the catch clicks into position. Make sure the lid is right down as show in Figure 5

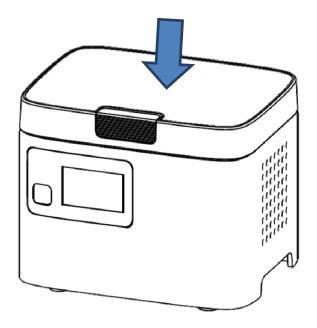


Figure 5. Closing the lid

#### 4.3 Programmable Chip

The protocol has been programed via PC software. The protocol has been storage in the Programmable Chip. There is no need to do any protocol setting process on the machine. This prevents setting errors and makes sure that the target nucleic acid will be amplified properly. When the Programmable Chip is placed into the port, the MiniTurbo will recognize it automatically.

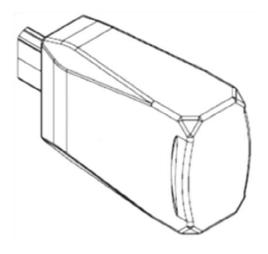


Figure 6. Programmable Chip

#### 4.4 Heated Lid

The Heated Lid raises the temperature of the air in the upper part of the sample vessels to a higher temperature than the reaction mixture. This prevents condensation of the evaporated water vapor on the vessel walls and keeps the concentration of the reaction mixture unchanged during the heating and cooling cycles. The heater platen also applies pressure to the caps or sealing film on the vessels to prevent vapor loss and cross contamination between samples.

#### 4.5 Loading the Reaction Vessel

For optimal performance of the **MiniTurbo**, the recommended sample volume for 0.2ml tubes is 20-50µl. Please make sure the tube caps are sealed tightly to prevent evaporation and overflow of liquid. Make sure the tubes are pushed straight down into the well so that they are all at the same level when the lid is closed.



Figure 7. Loading the Reaction Vessel

#### 4.6 Main screen

The information displayed on the **Main Screen** includes the protocol number, the temperature of the heater and the protocol running time as in the figure below.

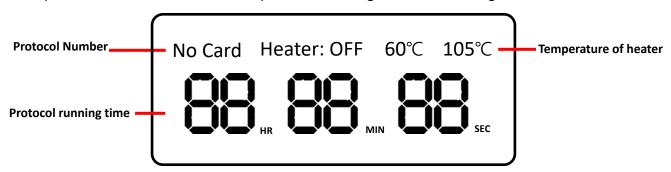


Figure 8. Main Screen Overview

#### 4.7 Start Running

After the MiniTurbo has recognized the protocol in the Programmable Chip, please push the start button to run the protocol. While the protocol is running, the start button acts as a change-over switch that toggles the main screen display between countdown time and heater temperature. If necessary, the start button can be pressed for 3 seconds to stop the protocol.

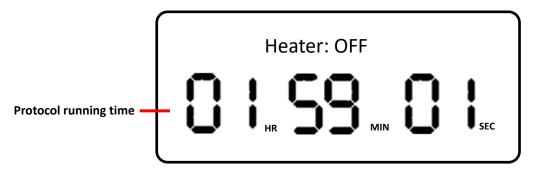


Figure 8. Main Screen shows countdown time during running

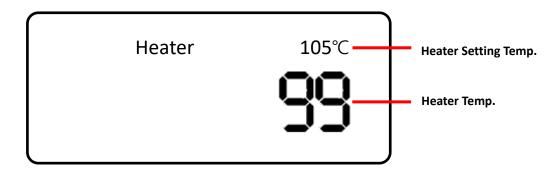


Figure 9. Main Screen shows heater temperature during running

#### 5. Preventative Maintenance

#### 5.1 Cleaning the Unit

Please ensure that no liquid is spilled onto or into the unit. In addition, periodically use a soft lint-free cloth and a little de-ionized water to wipe the unit clean and remove dust and other residue that comes with normal operation of the unit. Use a vacuum on the air vents to remove dust.

#### 5.2 Cleaning the Heated Lid

Make sure the **MiniTurbo** is turned off, unplugged from the mains and has cooled down. Use a mild detergent to clean any material residue from the lid. A Kimwipe<sup>™</sup> dipped in 70% ethanol will help to remove residue from the marker paint from the tube. Make sure the lid is completely dried before replacing the power cable.

## 6. Troubleshooting

#### 6.1 General Error

Problem	Cause	Action
The display	Power is not reaching the	Check power source voltage.
remains off even	system.	
when power is	The power cord is not properly	Reconnect the power cord.
switched on.	plugged into the socket.	
Switched on.	Faulty power switch.	Return the unit for service.
Lid can't not be	Foreign object between lid	Remove the foreign object or
	heater and sample block.	matter.
opened or closed.	Faulty lid lock mechanism.	Return the unit for service.
The display goes	Faulty backlight.	Return the unit for service.
off.	Faulty LCD panel	Return the unit for service.
	Operating environment	Make sure the temperature of
	temperature may be unsuitable.	the operating environment is
Cycle time is too		between 15 and 30°C.
long.	The electronic cooling element	Return the unit for service.
	may be damaged or aged.	
	Faulty temperature sensor.	Return the unit for service.
Lid booter does	Lid heater is set to off.	Check Lid Temperature setting
Lid heater does		in protocol setting software.
not work.	Lid sensor problem.	Return the unit for service.
Error massages	Refer to list of error messages	Check the nature of the error
Error messages.	in Section 6.2 below.	and take the suggested action.

## 6.2 Error Messages

The instrument will show an error message on the main screen and stop working until the problem has been solved, see the table below.

and problem had been contrad, eee and table below.				
Message	Cause	Action		
Er01- Heater overheat	Heater over 120°C	Reboot the unit.		
Er02- Heater cannot reach the setting temperature.	Faulty heater.	Reboot the unit.		
Er03- Heater has lost	The heater temperature has	Reboot the unit.		
temperature accuracy	been over ±3°C for 30 seconds.			

Er04- Heater	Heater temperature sensor	Reboot the unit.
temperature sensor	problem.	
•	problem.	
error.		
Er05- Block	Block temperature sensor	Reboot the unit.
temperature sensor	problem.	
error.		
Er06- Block	Cannot reach set temperature in	Reboot the unit.
temperature abnormal	1 minute.	
Er07- Block overheat.	The block temperature is 20°C	Reboot the unit.
	over the set temperature.	
Er08- Block has lost	The block temperature has gone	Reboot the unit.
temperature accuracy.	over ±3.0°C for 10 seconds.	
	Faulty Programmable chip.	Return the Programmable
Fron Connet read the		chip for service.
Er09- Cannot read the	Faulty protocol running port	Return the unit for
protocol even when		service.
Programmable chip is correctly inserted.	Programmable chip is not	Check the unit and
correctly inserted.	properly plugged into the port.	reconnect the
		Programmable chip.
Er10- Abnormal	Instrument shut down while a	Push the start button to
	protocol was running.	reset and start a new
interruption of power	Power supply was interrupted	protocol.
supply.	while a protocol was running.	

If the same error message appears after rebooting, please return the unit for service.

# **Appendix A: Technical Specifications**

Sample Block		
2x4 well Block	0.2 ml PCR tube w/ flat or dome cap	
Block Temperature		
Block Temperature Range	25 to 99 °C	
Max Heating Rate ( °C/sec.)	5.5	
Max Cooling Rate ( °C/sec.)	3.4	
Temperature Accuracy	+/- 0.4 °C	
Temperature Uniformity Across Block	+/- 0.4 °C	
General		
Display	A group of 6-digits display	
Heated Lid	Yes, fixed 105 °C (pre-heat to 60°C)	
Footprint Dimensions(HxWxD)	104mm x 136mm x 102mm	
Weight	1 kg	
Adapter	VAC 100-240, 50/60 Hz, 120 W	
Standard	CE, RoHS	
Operating Temperature	15 ~ 30°C	
Operating Humidity	65% or less RH	

## **Appendix B: CE Declaration**



BLUE-RAY BIOTECH CORP. 4F., No. 31, Sec. 2, Chang-An E. Rd., Zhong-Shan Dist., Taipei City 10456, Taiwan (R.O.C.)

**Declaration of Conformity** 

Product Name: Thermal Cycler

Model Names: MiniTurbo

All models comply with the following European standards:

**EMC:** EN 61326 (Group 1, Class A)

Safety: EN 61010-1 and EN 61010-2-101

To the best of my knowledge and belief, these units conform to these standards.

Name: Jimmy Kuo

Position: Quality Assurance Manager

Issue Date: 2018.08.03

#### Blue-Ray Biotech Corp.

4F., No. 31, Sec. 2, Chang-An E. Rd., Zhong-Shan Dist.,

Taipei City 10456, Taiwan (R.O.C.)

P/N: 401-MPBO03-10